


CAPRI 25 COVER

USE 60" MATERIAL

1. CUT ALL PEICES OUT OF CANVAS MATERIAL
2. HEM OUTSIDE EDGES OF CANVAS FIRST FOLDING OVER TWICE TO HIDE LOOSE EDGE (DET 1)
3. START WITH THE LEFT SIDE FIRST SEWING THE PANELS TOGETHER, THEN SEW THE RIGHT SIDE 2 PANELS TOGETHER, THEN THE MIDDLE SECTION.
4. PIN PANELS IN PLACE EVERY 8" TO 12" TO HOLD MATERIAL IN PLACE.
5. USE A LIGHT SEWING THREAD FIRST TO GET THE PANELS INTO THE RIGHT PLACE THEN GO BACK OVER THE LINES WITH YOUR HEAVYER THREAD. I FOUND THIS TO BE ALLOT EASIER IF YOU NEED TO RE SEW A SECTION.
6. TAKE THE COVER OUT TO THE BOAT AND LOCATE ANY NECESSARY SPOTS TO SECURE THE TARP DOWN TO THE DECK. I USED 3 BUTTONS ON EACH SIDE BELOW THE WOOD TRIN PIECES. AND REPLACED THE SCREWS FOR THE CATALINA PLACK WITH BUTTON HEADS.

7. I USED 4 #4 GROMIT CIRCLES IN THE FOUR CORNERS OF THE TARP. AND TWO MORE AT THE MAST CUTOUT.
8. SECURE THE TARP BY BURGEE CORDS AND SNAPS TO THE TO OF THE DECK.

9. I WILL BE PLACING SOME MORE SNAPS IN SOME DIFFERENT LOCATIONS SO THE WIND WILL NOT BLOW THE TARP OFF OF THE DECK IN HEAVY WINDS WHILE AT A MOORING.

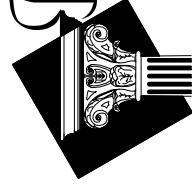

Design Solutions
of Oklahoma, LLC.

CHRIS S. MCKILLIP
Residential Design
918-254-2106

8301 E. 81st Street Suite E
Tulsa, Ok. 74133
CHDSI.COM
Chris@CHDSI.COM